




Кнопка PPBB-30N,
Кнопка APBB-22N

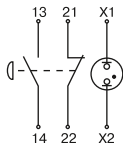


Кнопка AEIA-22

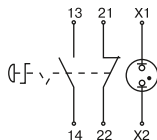

 
Кнопка ANE-22




Кнопка AEA-22,
Кнопка D8-11M

 

Кнопка AEAL-22

 


Кнопка AE-22,
Кнопка D8-11ZS

 


Кнопка ABLFP-22, ABLF-22,
ABLFS-22




Кнопка SB-7 "Пуск"
Кнопка SB-7 "Стоп"

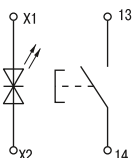

Кнопка LA167-BWF3161
Кнопка LA167-BWF3361
Кнопка LA167-BWF3561
Кнопка LA167-BWF3661
Кнопка LA167-BWF3171
Кнопка LA167-BWF3371
Кнопка LA167-BWF3571
Кнопка LA167-BWF3671

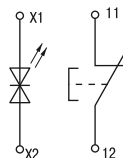

 
Кнопка LA167-BWF3462
Кнопка LA167-BWF3472
Кнопка LA167-BW3462
Кнопка LA167-BW3472




Кнопка LA167-BP21
 Кнопка LA167-BP31
 Кнопка LA167-BP51
 Кнопка LA167-BP61
 Кнопка LA167-BAF11
 Кнопка LA167-BAF21
 Кнопка LA167-BAF31
 Кнопка LA167-BAF51
 Кнопка LA167-BAF61



 
Кнопка LA167-BP42
 Кнопка LA167-BAF22
 Кнопка LA167-BAF42




Кнопка LA167-BP35
 Кнопка LA167-BP45
 Кнопка LA167-BAF35
 Кнопка LA167-BAF45
 Кнопка D8-11

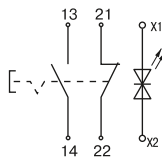


Кнопка D8-11TD

 

Кнопка D8-11T

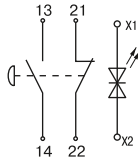

Кнопка D8-11MD

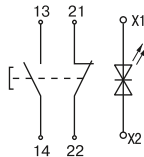

D8-11D

Рисунок 1 — Электрические схемы кнопок